


## Installation instruction for the cylinder-head gasket


**386.330** Suitable for Hyundai | Kia  
G4AG | G4LA | G4LB | G4UG

When installing cylinder head gaskets on Hyundai and Kia 1.2-litre inline four-cylinder engines (Hyundai model years between 2008 and 2020 or Kia model years between 2011 and 2017), ensure that sealant is applied to designated areas of the gasket, the cylinder head, and the lower housing of the timing chain. This prevents leaks at the front side of the cover gasket, which may occur due to potentially uneven surfaces.

1. The surfaces to which the sealant is applied must be clean and free of any residues.
2. Before installing the cylinder head gasket, apply **Elring – Das Original Dirko™ sealing compound** to the areas marked in red (A) on the top of the cylinder block.
3. Install the cylinder head gasket according to the specifications provided in the enclosed tightening instructions.
4. Apply **Elring – Das Original Dirko™ sealing compound** to the areas marked in red (B) on the top side of the cylinder head gasket.

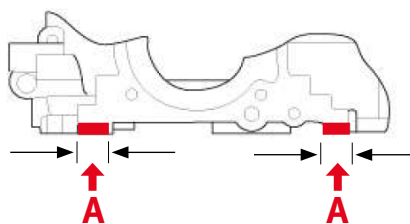

A = Bead length 2–3 mm

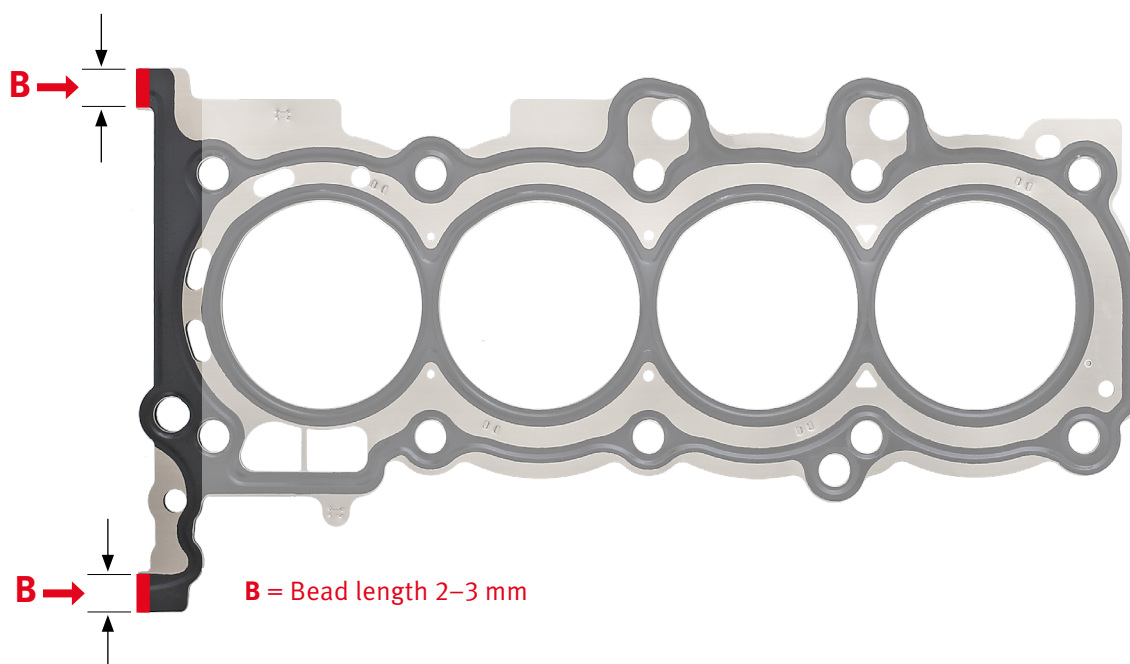

B = Bead length 2–3 mm



5. Install the cylinder head assembly. Then remove any excess sealant.



TecDoc



471.501 | 006.553

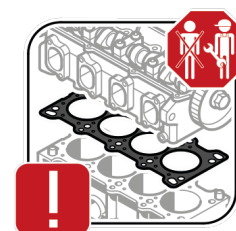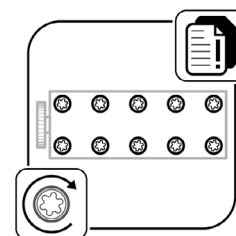

**ElringKlinger AG | Aftermarket Division**

Max-Eyth-Straße 2 | 72581 Dettingen/Erms | Germany

Phone +49 7123 724-799

service@elring.com | www.elring.com

TS1 05/2025



**Das Original**